

DLD - DIGITAL LOGIC DESIGN

Dr. Krishnanaik Vankdoth

B.E(ECE), M.Tech (ECE), Ph.D (ECE)

Professor in ECE Dept

Vaagdevi college of Engineering

Warangal – 506001

Books

1. **“Digital Design”** By M. Morris Mano and Michael D.Ciletti
2. **Logical Design and Application** By **Dr. Krishnanaik**
Vankdoth LAP LAMBERT Academic Publishing
Dnfscland/Germany – 2014
3. Complementary Material **“Logic and Computer Design Fundamentals ”** By M. Morris Mano & Charles R Kime.

DLD - DIGITAL LOGIC DESIGN

Digital Systems and Binary Numbers

- Digital


- Concerned with the interconnection among digital components and modules
 - » Best Digital System example is General Purpose Computer

- Logic Design

- Deals with the basic concepts and tools used to design digital hardware consisting of logic circuits
 - » Circuits to perform arithmetic operations (+, -, x, ÷)

- **Digital Signal** : Decimal values are difficult to represent in electrical systems. It is easier to use two voltage values than ten.
- Digital Signals have **two basic states**:
 - 1 (logic “high”, or H, or “on”)
 - 0 (logic “low”, or L, or “off”)
- Digital values are in a **binary format**. Binary means 2 states.
- A good example of binary is a light (only on or off)

on



Power switches have labels “1” for on and “0” for off.

- Bits and Pieces of DLD History
- George Boole
 - Mathematical Analysis of Logic (1847)
 - An Investigation of Laws of Thoughts; Mathematical Theories of Logic and Probabilities (1854)
- Claude Shannon
 - Rediscovered the Boole
 - “ A Symbolic Analysis of Relay and Switching Circuits “
 - Boolean Logic and Boolean Algebra were Applied to Digital Circuitry

----- Beginning of the Digital Age and/or Computer Age

World War II

Computers as Calculating Machines

Arlington (State Machines) “ Control “

Motivation

- Microprocessors/Microelectronics have revolutionized our world
 - Cell phones, internet, rapid advances in medicine, etc.
- The semiconductor industry has grown tremendously




Digital Systems and Binary Numbers


- Digital age and information age
- Digital computers
 - General purposes
 - Many scientific, industrial and commercial applications
- Digital systems
 - Telephone switching exchanges
 - Digital camera
 - Electronic calculators, PDA's
 - Digital TV
- Discrete information-processing systems
 - Manipulate discrete elements of information
 - For example, {1, 2, 3, ...} and {A, B, C, ...}...

Analog and Digital Signal

- Analog system
 - The physical quantities or signals may vary continuously over a specified range.
- Digital system
 - The physical quantities or signals can assume only discrete values.
 - Greater accuracy

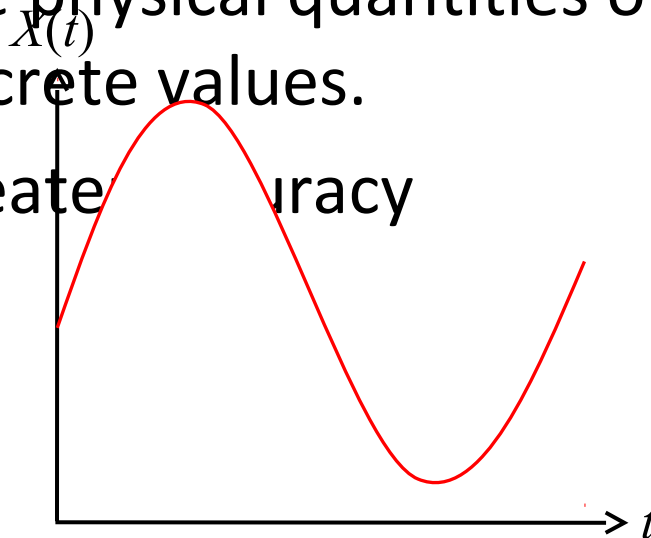

Analog signal

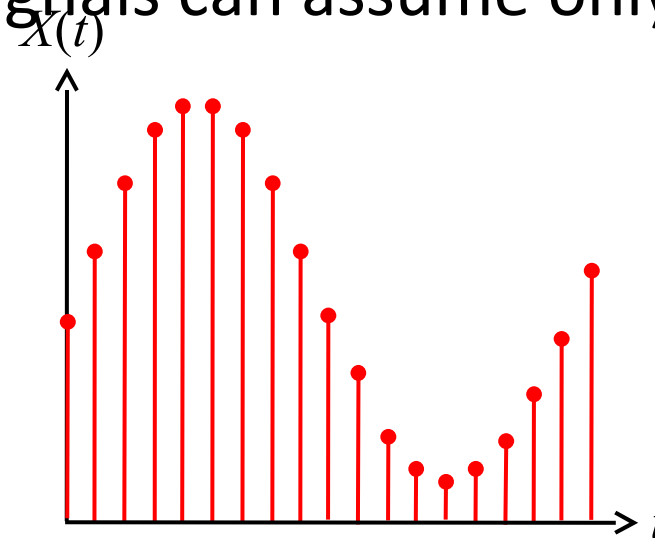


Digital signal

	Analog	Digital
Technology:	Analog technology records waveforms as they are.	Converts analog waveforms into set of numbers and records them. The numbers are converted into voltage stream for representation.
Uses:	Can be used in various computing platforms and under operating systems like Linux, Unix, Mac OS and Windows.	Computing and electronics
Signal:	Analog signal is a continuous signal which transmits information as a response to changes in physical phenomenon.	Digital signals are discrete time signals generated by digital modulation.
Representation:	Uses continuous range of values to represent information.	Uses discrete or discontinuous values to represent information.
Memory unit:	not required	required
applications:	Thermometer	PCs, PDAs
Data transmissions:	not of high quality	high quality
Result:	not very accurate	accurate
Storage capacity:	limited	high
Process:	processed using OPAMP which uses electronic circuits	using microprocessor which uses logic circuits
Respose to Noise:	More likely to get affected reducing accuracy	Less affected since noise response are analog in nature
Waves:	Denoted by sine waves	Denoted by square waves
Example:	human voice in air	electronic devices

Binary Digital Signal

- An information variable represented by physical quantity.
- For digital systems, the variable takes on discrete values.
 - Two level, or binary values are the most prevalent values.
- **Binary values are represented abstractly by:**
 - Digits 0 and 1
 - Words (symbols) False (F) and True (T)
 - Words (symbols) Low (L) and High (H)
 - And words On and Off
- Binary values are represented by values or ranges of values of physical quantities.

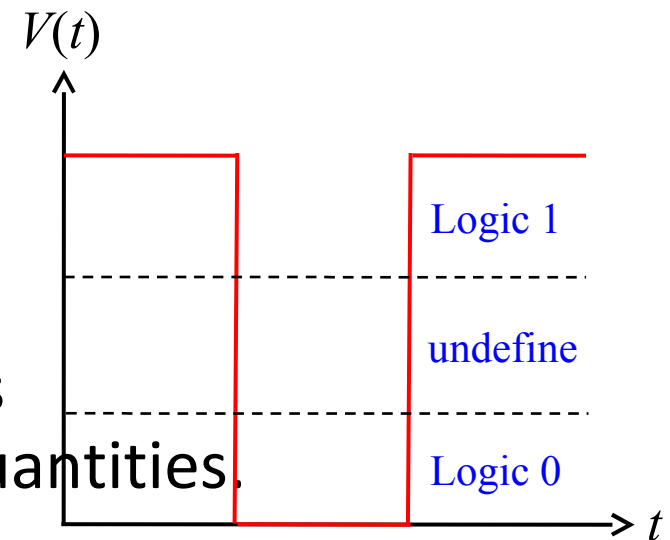

Binary digital signal

Decimal Number System

- Base (also called radix) = 10
 - 10 digits { 0, 1, 2, 3, 4, 5, 6, 7, 8, 9 }



- Digit Position
 - Integer & fraction

2	1	0	-1	-2
5	1	2	7	4

- Digit Weight
 - Weight = $(Base)^{Position}$

100	10	1	0.1	0.01

- Magnitude
 - Sum of “*Digit x Weight*”

500 10 2 0.7 0.04

$$d_2 * B^2 + d_1 * B^1 + d_0 * B^0 + d_{-1} * B^{-1} + d_{-2} * B^{-2}$$

- Formal Notation

(512.74)₁₀

Octal Number System

- Base = 8
 - 8 digits { 0, 1, 2, 3, 4, 5, 6, 7 }
- Weights
 - Weight = $(Base)^{Position}$
- Magnitude
 - Sum of “*Digit x Weight*”
- Formal Notation

64	8	1	1/8	1/64
<div>5</div>	<div>1</div>	<div>2</div>	<div>7</div>	<div>4</div>
2	1	0	-1	-2

$$5 * 8^2 + 1 * 8^1 + 2 * 8^0 + 7 * 8^{-1} + 4 * 8^{-2}$$
$$=(330.9375)_{10}$$
$$(512.74)_8$$

Binary Number System

- Base = 2
 - 2 digits { 0, 1 }, called *binary digits* or “*bits*”
- Weights
 - Weight = $(Base)^{Position}$
- Magnitude
 - Sum of “*Bit x Weight*”
- Formal Notation
- Groups of bits

4 bits = *Nibble*

8 bits = *Byte*

4	2	1	1/2	1/4
<div>1</div>	<div>0</div>	<div>1</div>	<div>0</div>	<div>1</div>
2	1	0	-1	-2

$$1 * 2^2 + 0 * 2^1 + 1 * 2^0 + 0 * 2^{-1} + 1 * 2^{-2}$$
$$= (5.25)_{10}$$
$$(101.01)_2$$

1 0 1 1

1 1 0 0 0 1 0 1

Hexadecimal Number System

- Base = 16
 - 16 digits { 0, 1, 2, 3, 4, 5, 6, 7, 8, 9, A, B, C, D, E, F }

- Weights

- Weight = $(Base)^{Position}$

- Magnitude

- Sum of “*Digit x Weight*”

- Formal Notation

256	16	1	1/16	1/256
<div>1</div>	<div>E</div>	<div>5</div>	<div>7</div>	<div>A</div>
2	1	0	-1	-2


$$1 * 16^2 + 14 * 16^1 + 5 * 16^0 + 7 * 16^{-1} + 10 * 16^{-2}$$

$$=(485.4765625)_{10}$$

$$(1E5.7A)_{16}$$

The Power of 2

n	2^n	n	2^n	
0	$2^0=1$	8	$2^8=256$	
1	$2^1=2$	9	$2^9=512$	
2	$2^2=4$	10	$2^{10}=1024$	Kilo
3	$2^3=8$	11	$2^{11}=2048$	
4	$2^4=16$	12	$2^{12}=4096$	
5	$2^5=32$	20	$2^{20}=1M$	Mega
6	$2^6=64$	30	$2^{30}=1G$	Giga
7	$2^7=128$	40	$2^{40}=1T$	Tera



Addition

- Decimal Addition

The diagram illustrates a step in decimal addition. It shows a vertical addition problem with a carry and a result that exceeds the base, requiring a subtraction step.

$$\begin{array}{r} 1 \quad 1 \quad \leftarrow \text{Carry} \\ 5 \quad 5 \\ + 5 \quad 5 \\ \hline 1 \quad 1 \quad 0 \end{array}$$


An orange arrow points from the '0' in the result to the text: $= \textit{Ten} \geq \textit{Base}$

A red arrow points from the text $= \textit{Ten} \geq \textit{Base}$ to the text: \Rightarrow Subtract a Base

Binary Addition

- Column Addition

	1	1	1	1	1	1		
		1	1	1	1	0	1	= 61
+			1	0	1	1	1	= 23
<hr/>								
	1	0	1	0	1	0	0	= 84

 $\geq (2)_{10}$



Binary Subtraction

- Borrow a “Base” when needed

		1		2				$= (10)_2$
	0	2	2	0	0	2		
	1	0	0	1	1	0	1	$= 77$
-			1	0	1	1	1	$= 23$
<hr/>								
	0	1	1	0	1	1	0	$= 54$


Binary Multiplication

- Bit by bit

$$\begin{array}{r} 10111 \\ \times 1010 \\ \hline 00000 \\ 10111 \\ 00000 \\ 10111 \\ \hline 11100110 \end{array}$$



Number Base Conversions

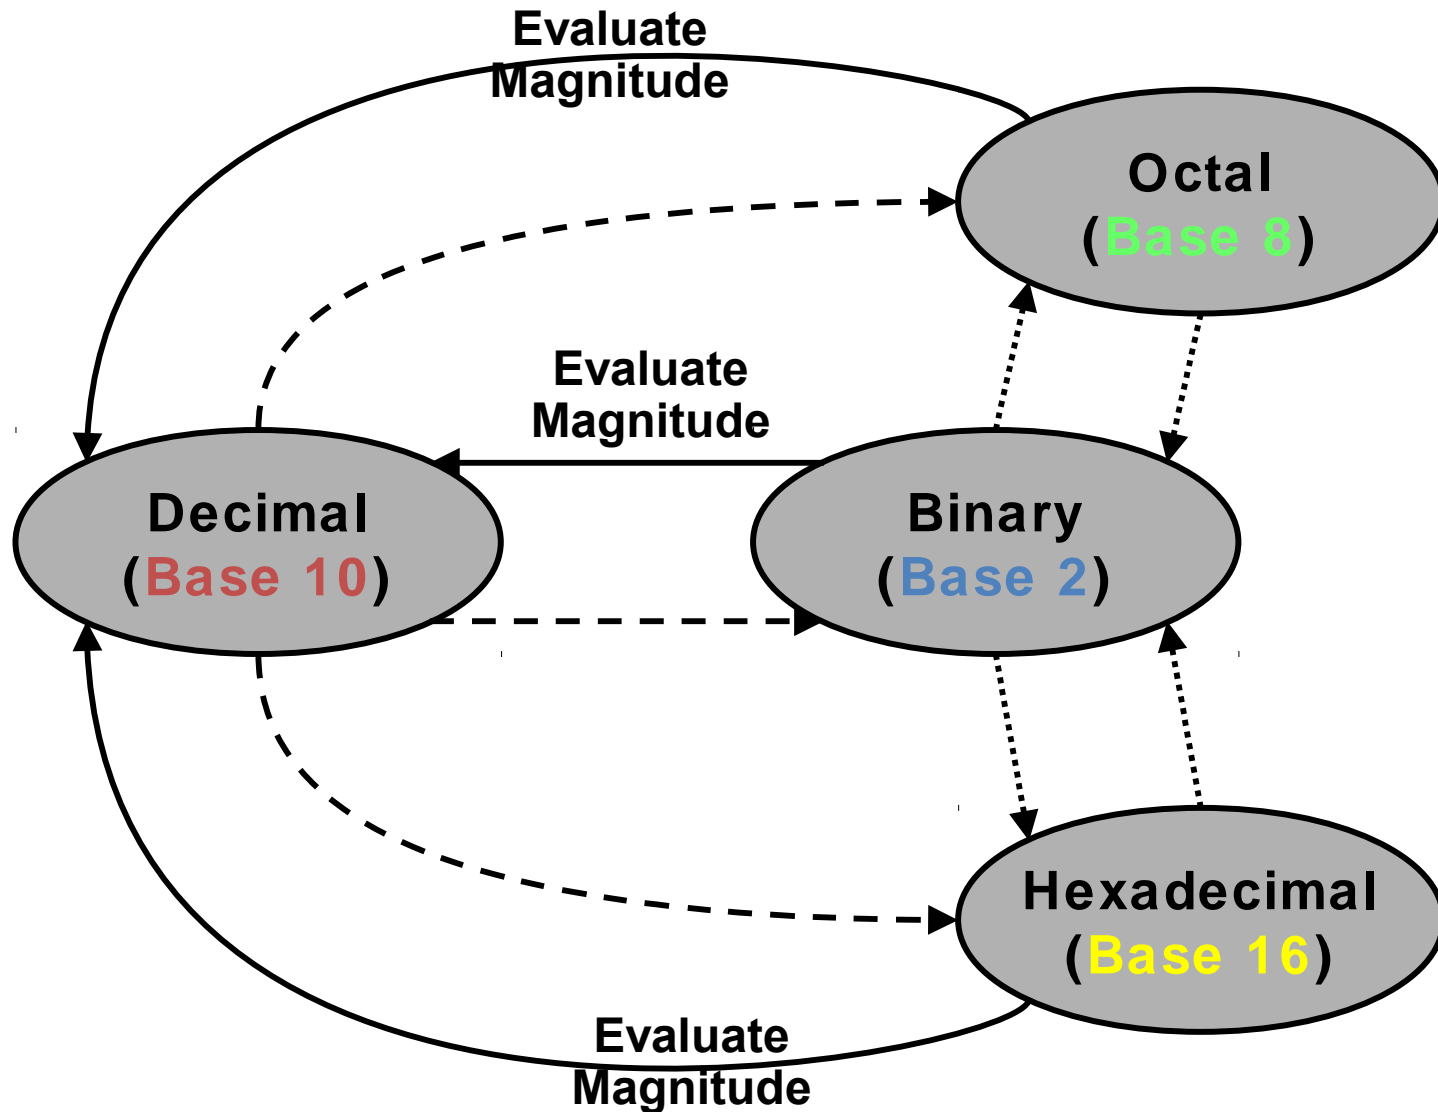


Decimal (*Integer*) to Binary Conversion

- Divide the number by the 'Base' (=2)
- Take the remainder (either 0 or 1) as a coefficient
- Take the quotient and repeat the division

Example: $(13)_{10}$

	Quotient	Remainder	Coefficient
$13 / 2 =$	6	1	$a_0 = 1$
$6 / 2 =$	3	0	$a_1 = 0$
$3 / 2 =$	1	1	$a_2 = 1$
$1 / 2 =$	0	1	$a_3 = 1$

Answer: $(13)_{10} = (a_3 a_2 a_1 a_0)_2 = (1101)_2$



MSB LSB


Decimal (*Fraction*) to Binary Conversion

- Multiply the number by the 'Base' (=2)
- Take the integer (either 0 or 1) as a coefficient
- Take the resultant fraction and repeat the division

Example: $(0.625)_{10}$

		Integer	Fraction	Coefficient
0.625	$* 2 =$	1	$. 25$	$a_{-1} = 1$
0.25	$* 2 =$	0	$. 5$	$a_{-2} = 0$
0.5	$* 2 =$	1	$. 0$	$a_{-3} = 1$

Answer: $(0.625)_{10} = (0.a_{-1}a_{-2}a_{-3})_2 = (0.101)_2$



Decimal to Octal Conversion

Example: $(175)_{10}$

	Quotient	Remainder	Coefficient
$175 / 8 =$	21	7	$a_0 = 7$
$21 / 8 =$	2	5	$a_1 = 5$
$2 / 8 =$	0	2	$a_2 = 2$

Answer: $(175)_{10} = (a_2 a_1 a_0)_8 = (257)_8$

Example: $(0.3125)_{10}$


	Integer	Fraction	Coefficient
$0.3125 * 8 =$	2	5	$a_{-1} = 2$
$0.5 * 8 =$	4	0	$a_{-2} = 4$

Answer: $(0.3125)_{10} = (0.a_{-1} a_{-2} a_{-3})_8 = (0.24)_8$

Binary – Octal Conversion

- $8 = 2^3$
- Each group of 3 bits represents an octal digit

Example:

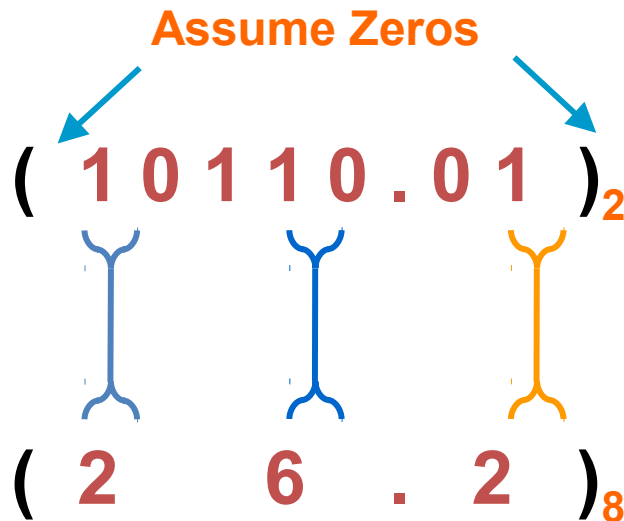

Octal	Binary
0	0 0 0
1	0 0 1
2	0 1 0
3	0 1 1
4	1 0 0
5	1 0 1
6	1 1 0
7	1 1 1


Works **both** ways (*Binary to Octal & Octal to Binary*)

Binary – Hexadecimal Conversion

- $16 = 2^4$
- Each group of 4 bits represents a hexadecimal digit

Hex	Binary
0	0 0 0 0
1	0 0 0 1
2	0 0 1 0
3	0 0 1 1
4	0 1 0 0
5	0 1 0 1
6	0 1 1 0
7	0 1 1 1
8	1 0 0 0
9	1 0 0 1
A	1 0 1 0
B	1 0 1 1
C	1 1 0 0
D	1 1 0 1
E	1 1 1 0
F	1 1 1 1

Example:

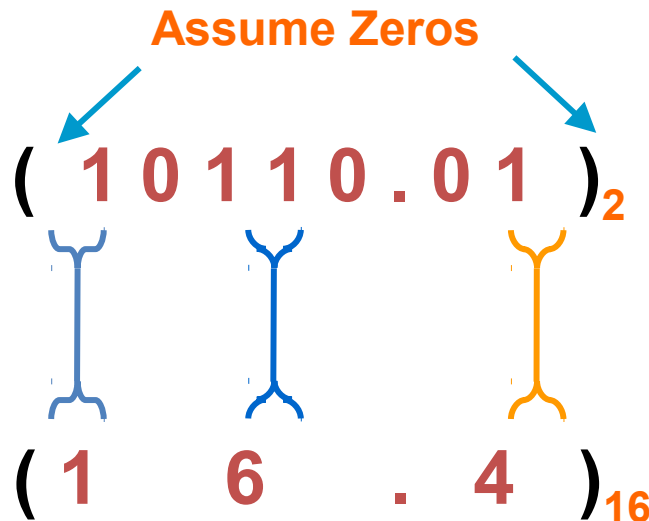


Works **both** ways (*Binary to Hex & Hex to Binary*)

Octal – Hexadecimal Conversion

- Convert to **Binary** as an intermediate step

Example:

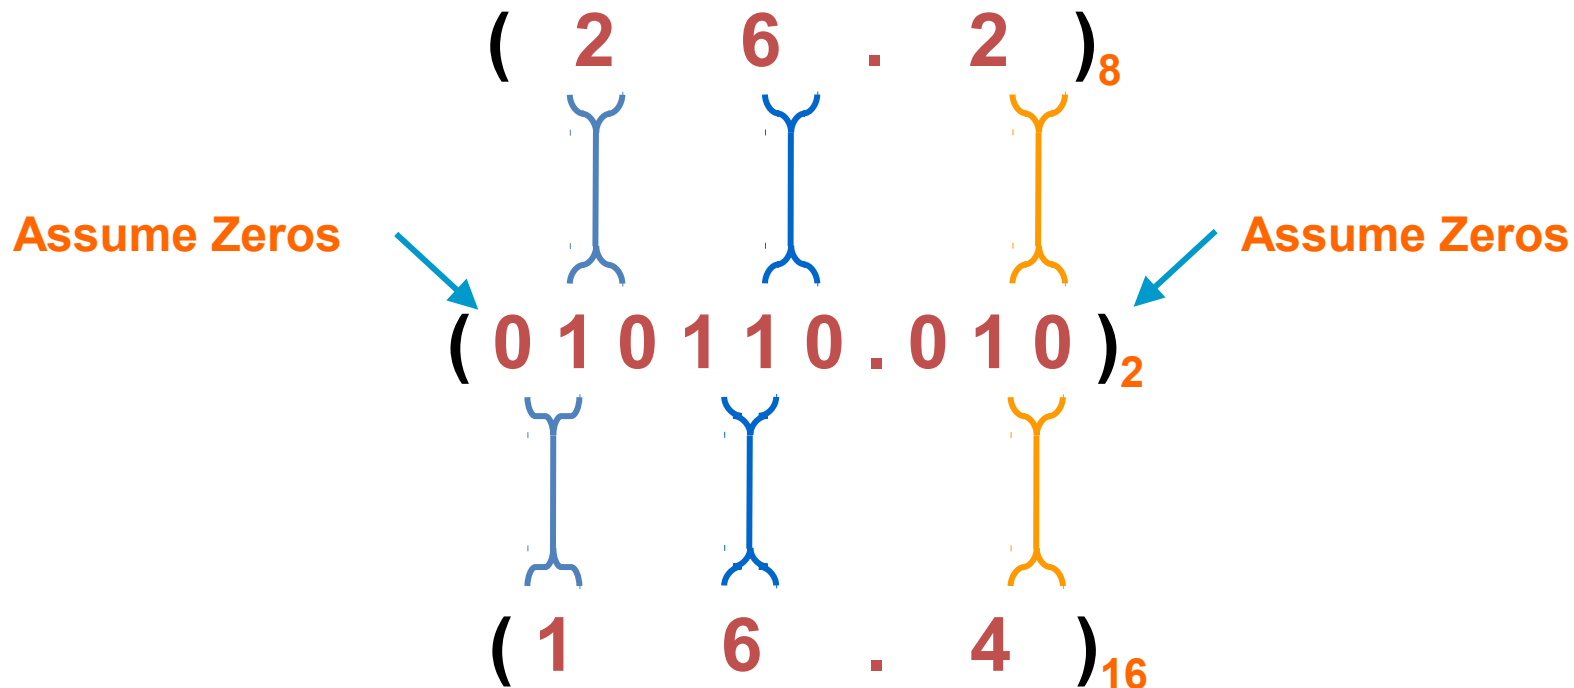

Works **both** ways (*Octal to Hex & Hex to Octal*)

Decimal, Binary, Octal and Hexadecimal

Decimal	Binary	Octal	Hex
00	0000	00	0
01	0001	01	1
02	0010	02	2
03	0011	03	3
04	0100	04	4
05	0101	05	5
06	0110	06	6
07	0111	07	7
08	1000	10	8
09	1001	11	9
10	1010	12	A
11	1011	13	B
12	1100	14	C
13	1101	15	D
14	1110	16	E
15	1111	17	F



1.5 Complements

- There are two types of complements for each base- r system: the radix complement and diminished radix complement.
- **Diminished Radix Complement - $(r-1)$'s Complement**
 - Given a number N in base r having n digits, the $(r-1)$'s complement of N is defined as:
$$(r^n - 1) - N$$
- **Example for 6-digit decimal numbers:**
 - 9's complement is $(r^n - 1) - N = (10^6 - 1) - N = 999999 - N$
 - 9's complement of 546700 is $999999 - 546700 = 453299$
- **Example for 7-digit binary numbers:**
 - 1's complement is $(r^n - 1) - N = (2^7 - 1) - N = 1111111 - N$
 - 1's complement of 1011000 is $1111111 - 1011000 = 0100111$
- **Observation:**
 - Subtraction from $(r^n - 1)$ will never require a borrow
 - Diminished radix complement can be computed digit-by-digit
 - For binary: $1 - 0 = 1$ and $1 - 1 = 0$

Complements

- 1's Complement (*Diminished Radix Complement*)
 - All '0's become '1's
 - All '1's become '0's

Example $(10110000)_2$

$\Rightarrow (01001111)_2$

If you add a number and its 1's complement ...

$$\begin{array}{r} 1\ 0\ 1\ 1\ 0\ 0\ 0\ 0 \\ +\ 0\ 1\ 0\ 0\ 1\ 1\ 1\ 1 \\ \hline 1\ 1\ 1\ 1\ 1\ 1\ 1\ 1 \end{array}$$



Complements

- Radix Complement

The r 's complement of an n -digit number N in base r is defined as $r^n - N$ for $N \neq 0$ and as 0 for $N = 0$. Comparing with the $(r - 1)$'s complement, we note that the r 's complement is obtained by adding 1 to the $(r - 1)$'s complement, since $r^n - N = [(r^n - 1) - N] + 1$.

- Example: Base-10

The 10's complement of 012398 is 987602
The 10's complement of 246700 is 753300

- Example: Base-2

The 2's complement of 1101100 is 0010100
The 2's complement of 0110111 is 1001001

Complements

- 2's Complement (*Radix Complement*)

- Take 1's complement then add 1
- OR
- Toggle all bits to the left of the first '1' from the right

Example:

Number: 1 0 1 1 0 0 0 0

1 0 1 1 0 0 0 0

1's Comp.: 0 1 0 0 1 1 1 1

 + 1

 0 1 0 1 0 0 0 0

0 1 0 1 0 0 0 0

Complements

- Subtraction with Complements
 - The subtraction of two n -digit unsigned numbers $M - N$
 1. Add the minuend M to the r 's complement of the subtrahend N . Mathematically, $M + (r^n - N) = M - N + r^n$.
 2. If $M \geq N$, the sum will produce an end carry r^n , which can be discarded; what is left is the result $M - N$.
 3. If $M < N$, the sum does not produce an end carry and is equal to $r^n - (N - M)$, which is the r 's complement of $(N - M)$. To obtain the answer in a familiar form, take the r 's complement of the sum and place a negative sign in front.

Complements

- Example 1.5

- Using 10's complement, subtract $72532 - 3250$.

	$M =$	72532
10's complement of	$N =$	<u>+96750</u>
	Sum =	169282
	Discard end carry $10^5 =$	<u>-100000</u>
	Answer =	69282

- Example 1.6

- Using 10's complement, subtract $3250 - 72532$.

	$M =$	03250
10's complement of	$N =$	<u>+27468</u>
	Sum =	30718



There is no end carry.



Therefore, the answer is $-(10's \text{ complement of } 30718) = -69282$.

Complements

- Example 1.7
 - Given the two binary numbers $X = 1010100$ and $Y = 1000011$, perform the subtraction (a) $X - Y$; and (b) $Y - X$, by using 2's complement.

(a)	$X =$	1010100
	2's complement of $Y =$	<u>+0111101</u>
	Sum =	10010001
	Discard end carry $2^7 =$	<u>-10000000</u>
	Answer. $X - Y =$	0010001

(b)	$Y =$	1000011
	2's complement of $X =$	<u>+ 0101100</u>
	Sum =	1101111

There is no end carry.
Therefore, the answer is $Y - X = - (2\text{'s complement of } 1101111) = -0010001$.

Complements

- Subtraction of unsigned numbers can also be done by means of the $(r - 1)$'s complement. Remember that the $(r - 1)$'s complement is one less than the r 's complement.
- Example 1.8
 - Repeat Example 1.7, but this time using 1's complement.

$$\begin{array}{r} \text{(a) } X - Y = 1010100 - 1000011 \\ X = 1010100 \\ \text{1's complement of } Y = \pm 0111100 \\ \text{Sum} = 10010000 \\ \text{End-around carry} = \underline{+ 1} \\ \text{Answer. } X - Y = 0010001 \end{array}$$

$$\begin{array}{r} \text{(b) } Y - X = 1000011 - 1010100 \\ Y = 1000011 \\ \text{1's complement of } X = \underline{+ 0101011} \\ \text{Sum} = 1101110 \end{array}$$



There is no end carry, Therefore, the answer is $Y - X = - (1\text{'s complement of } 1101110) = -0010001$.

1.6 Signed Binary Numbers

- To represent negative integers, we need a notation for negative values.
- It is customary to represent the sign with a bit placed in the leftmost position of the number since binary digits.
- The convention is to make the **sign bit 0 for positive** and **1 for negative**.
- Example:

Signed-magnitude representation:	10001001
Signed-1's-complement representation:	11110110
Signed-2's-complement representation:	11110111

- **Table 1.3** lists all possible four-bit signed binary numbers in the three representations.

Signed Binary Numbers

Table 1.3
Signed Binary Numbers

Decimal	Signed-2's Complement	Signed-1's Complement	Signed Magnitude
+7	0111	0111	0111
+6	0110	0110	0110
+5	0101	0101	0101
+4	0100	0100	0100
+3	0011	0011	0011
+2	0010	0010	0010
+1	0001	0001	0001
+0	0000	0000	0000
−0	—	1111	1000
−1	1111	1110	1001
−2	1110	1101	1010
−3	1101	1100	1011
−4	1100	1011	1100
−5	1011	1010	1101
−6	1010	1001	1110
−7	1001	1000	1111
−8	1000	—	—

Signed Binary Numbers

- **Arithmetic addition**
 - The addition of two numbers in the signed-magnitude system follows the rules of ordinary arithmetic. If the signs are the same, we add the two magnitudes and give the sum the common sign. If the signs are different, we subtract the smaller magnitude from the larger and give the difference the sign of the larger magnitude.
 - The addition of two signed binary numbers with negative numbers represented in signed-2's-complement form is obtained from the addition of the two numbers, including their sign bits.
 - A carry out of the sign-bit position is discarded.
- Example:

+ 6	00000110	– 6	11111010
<u>+13</u>	<u>00001101</u>	<u>+13</u>	<u>00001101</u>
+ 19	00010011	+ 7	00000111
+ 6	00000110	– 6	11111010
<u>–13</u>	<u>11110011</u>	<u>–13</u>	<u>11110011</u>
– 7	11111001	– 19	11101101

Signed Binary Numbers

- Arithmetic Subtraction

- 1. Take the 2's complement of the subtrahend (including the sign bit) and add it to the minuend (including sign bit).
 2. A carry out of sign-bit position is discarded.

$$\begin{aligned} & \longrightarrow (\pm A) - (+B) = (\pm A) + (-B) \\ & (\pm A) - (-B) = (\pm A) + (+B) \end{aligned}$$


$$(-6) - (-13) \longrightarrow (11111010 - 11110011)$$

- Example: $\longrightarrow (11111010 + 00001101)$

$$\longrightarrow 00000111 (+7)$$

1.7 Binary Codes

Digital data is represented, stored and transmitted as groups of binary digits also known as binary code.

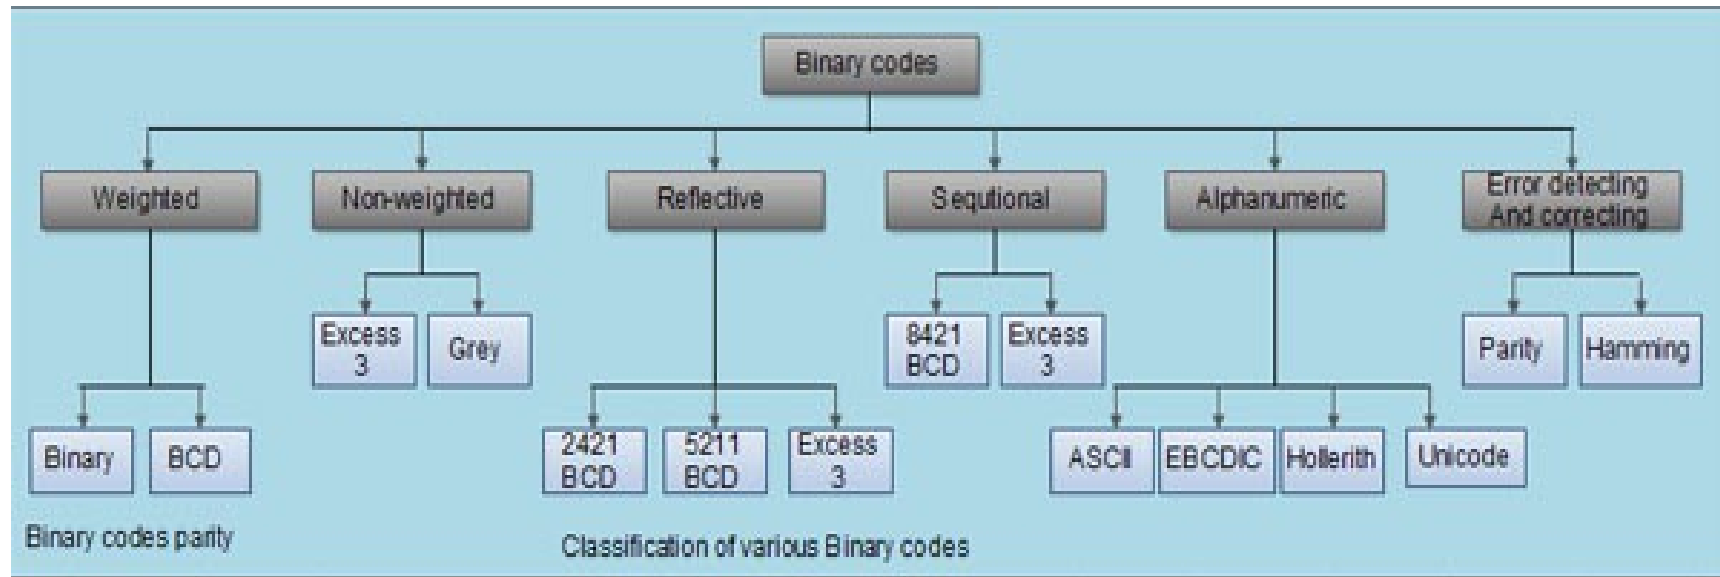

- **Weighted codes:** In weighted codes, each digit is assigned a specific weight according to its position.
- **Non-weighted codes:** In non-weighted codes are not appositionally weighted.
- **Reflective codes:** A code is reflective when the code is self complementing. In other words, when the code for 9 is the complement the code for 0, 8 for 1, 7 for 2, 6 for 3 and 5 for 4.
- **Sequential codes:** In sequential codes, each succeeding 'code is one binary number greater than its preceding code.
- **Alphanumeric codes:** Codes used to represent numbers, alphabetic characters, symbols
- **Error defecting and correcting codes:** Codes which allow error defection and correction are called error detecting and' correcting codes.

- BCD Code

- A number with k decimal digits will require 4k bits in BCD.
- Decimal 396 is represented in BCD with 12bits as 0011 1001 0110, with each group of 4 bits representing one decimal digit.
- A decimal number in BCD is the same as its equivalent binary number only when the number is between 0 and 9.
- The binary combinations 1010 through 1111 are not used and have no meaning in BCD.

Table 1.4
Binary-Coded Decimal (BCD)

Decimal Symbol	BCD Digit
0	0000
1	0001
2	0010
3	0011
4	0100
5	0101
6	0110
7	0111
8	1000
9	1001

Example: Consider decimal 185 and its corresponding value in BCD and binary:

$$(185)_{10} = (0001\ 1000\ 0101)_{\text{BCD}} = (10111001)_2$$

BCD addition

4	0100	4	0100	8	1000
+ 5	+ 0101	+ 8	+ 1000	+ 9	+ 1001
9	1001	12	1100	17	10001
			+ 0110		+ 0110
			10010		10111

Binary Codes

- Other Decimal Codes

Table 1.5

Four Different Binary Codes for the Decimal Digits

Decimal Digit	BCD 8421	2421	Excess-3	8, 4, – 2, – 1
0	0000	0000	0011	0000
1	0001	0001	0100	0111
2	0010	0010	0101	0110
3	0011	0011	0110	0101
4	0100	0100	0111	0100
5	0101	1011	1000	1011
6	0110	1100	1001	1010
7	0111	1101	1010	1001
8	1000	1110	1011	1000
9	1001	1111	1100	1111
Unused bit combi- nations	1010	0101	0000	0001
	1011	0110	0001	0010
	1100	0111	0010	0011
	1101	1000	1101	1100
	1110	1001	1110	1101
	1111	1010	1111	1110

Binary Codes

- Gray Code

- The advantage is that only bit in the code group changes in going from one number to the next.

- Error detection.
- Representation of analog data.
- Low power design.

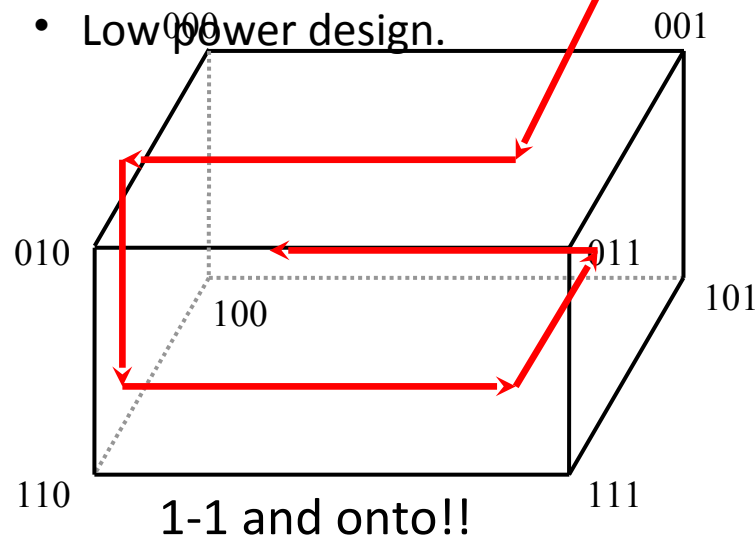


Table 1.6
Gray Code

Gray Code	Decimal Equivalent
0000	0
0001	1
0011	2
0010	3
0110	4
0111	5
0101	6
0100	7
1100	8
1101	9
1111	10
1110	11
1010	12
1011	13
1001	14
1000	15

- American Standard Code for Information Interchange (ASCII) Character Code

Table 1.7

American Standard Code for Information Interchange (ASCII)

$b_4b_3b_2b_1$	$b_7b_6b_5$							
	000	001	010	011	100	101	110	111
0000	NUL	DLE	SP	0	@	P	`	p
0001	SOH	DC1	!	1	A	Q	a	q
0010	STX	DC2	“	2	B	R	b	r
0011	ETX	DC3	#	3	C	S	c	s
0100	EOT	DC4	\$	4	D	T	d	t
0101	ENQ	NAK	%	5	E	U	e	u
0110	ACK	SYN	&	6	F	V	f	v
0111	BEL	ETB	‘	7	G	W	g	w
1000	BS	CAN	(8	H	X	h	x
1001	HT	EM)	9	I	Y	i	y
1010	LF	SUB	*	:	J	Z	j	z
1011	VT	ESC	+	;	K	[k	{
1100	FF	FS	,	<	L	\	l	
1101	CR	GS	–	=	M]	m	}
1110	SO	RS	.	>	N	^	n	~
1111	SI	US	/	?	O	–	o	DEL

- ASCII Character Code

Control characters

NUL	Null	DLE	Data-link escape
SOH	Start of heading	DC1	Device control 1
STX	Start of text	DC2	Device control 2
ETX	End of text	DC3	Device control 3
EOT	End of transmission	DC4	Device control 4
ENQ	Enquiry	NAK	Negative acknowledge
ACK	Acknowledge	SYN	Synchronous idle
BEL	Bell	ETB	End-of-transmission block
BS	Backspace	CAN	Cancel
HT	Horizontal tab	EM	End of medium
LF	Line feed	SUB	Substitute
VT	Vertical tab	ESC	Escape
FF	Form feed	FS	File separator
CR	Carriage return	GS	Group separator
SO	Shift out	RS	Record separator
SI	Shift in	US	Unit separator
SP	Space	DEL	Delete

ASCII Character Codes and Properties

- American Standard Code for Information Interchange (Refer to Table 1.7)
- A popular code used to represent information sent as character-based data.
- It uses 7-bits to represent:
 - 94 Graphic printing characters.
 - 34 Non-printing characters.
- Some non-printing characters are used for text format (e.g. BS = Backspace, CR = carriage return).
- Other non-printing characters are used for record marking and flow control (e.g. STX and ETX start and end text areas).
- ASCII has some interesting properties:
 - Digits 0 to 9 span Hexadecimal values 30_{16} to 39_{16}
 - Upper case A-Z span 41_{16} to $5A_{16}$
 - Lower case a-z span 61_{16} to $7A_{16}$
 - Lower to upper case translation (and vice versa) occurs by flipping bit 6.

- **Error-Detecting Code**

- To detect errors in data communication and processing, an eighth bit is sometimes added to the ASCII character to indicate its parity.
- A **parity bit** is an extra bit included with a message to make the total number of 1's either even or odd.

- **Example:**

- Consider the following two characters and their even and odd parity:

	With even parity	With odd parity
ASCII A = 1000001	01000001	11000001
ASCII T = 1010100	11010100	01010100

- **Error-Detecting Code**

- **Redundancy** (e.g. extra information), in the form of extra bits, can be incorporated into binary code words to detect and correct errors.
- A simple form of redundancy is **parity**, an extra bit appended onto the code word to make the number of 1's odd or even. Parity can detect all single-bit errors and some multiple-bit errors.
- A code word has **even parity** if the number of 1's in the code word is even.
- A code word has **odd parity** if the number of 1's in the code word is odd.
- Example:

Message A: 10001001 **1** (even parity)

Message B: 10001001 **0** (odd parity)

Hamming Codes

- Invented **W.B Hamming** and **Simple 1parity bit** can tell us an error occurred
- **Multiple parity bits** can also tell us where it occurred
- **$O(\lg(n))$ bits** needed to **detect and correct one bit errors**.
- In generally we use 7 bits hamming code
 - 4 data bits/message bit (m) and 3 parity bits ($2^p \geq P+m+1$)

Example: Byte **1011 0001**

Two data blocks, **1011** and **0001**.

Expand the first block to 7 bits: **__ 1 __ 0 1 1**.

Bit 1 is 0, because $b3+b5+b7$ is even.

Bit 2 is 1, $b3+b6+b7$ is odd.

bit 4 is 0, because $b5+b6+b7$ is even.

Our 7 bit block is: **0 1 1 0 0 1 1**

Repeat for right block giving **1 1 0 1 0 0 1**

Error detectings: **0 1 1 0 1 1 1**

Re-Check each parity bit

Bits 1 and 4 are incorrect

$1 + 4 = 5$, so the error occurred in bit 5

Bit position	1	2	3	4	5	6	7	
Encoded data bits	p1	p2	d1	p3	d2	d3	d4	
Parity bit coverage	p1	X		X		X	X	...
	p2		X	X		X	X	
	p3			X	X	X	X	


Binary Storage and Registers

- Registers
 - A **binary cell** is a device that possesses two stable states and is capable of storing one of the two states.
 - A **register** is a group of binary cells. A register with n cells can store any discrete quantity of information that contains n bits.

n cells  2^n possible states

- A binary cell
 - Two stable state
 - Store one bit of information
 - Examples: flip-flop circuits, ferrite cores, capacitor
- A register
 - A group of binary cells
 - AX in x86 CPU
- Register Transfer
 - A transfer of the information stored in one register to another.
 - One of the major operations in digital system.
 - An example in next slides.

A Digital Computer Example

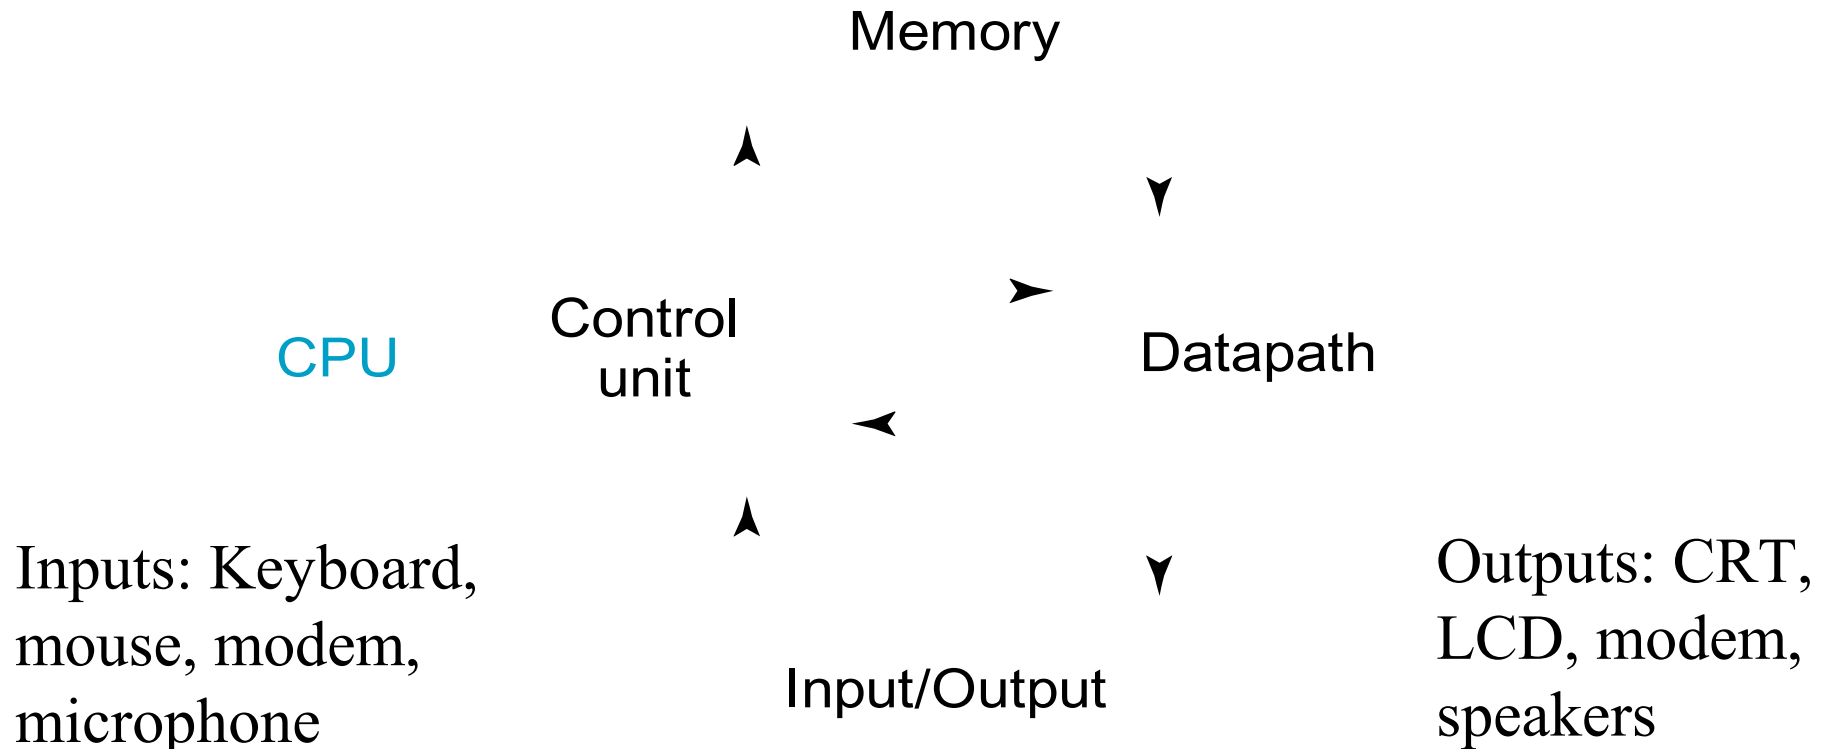

Synchronous or
Asynchronous?

Transfer of information


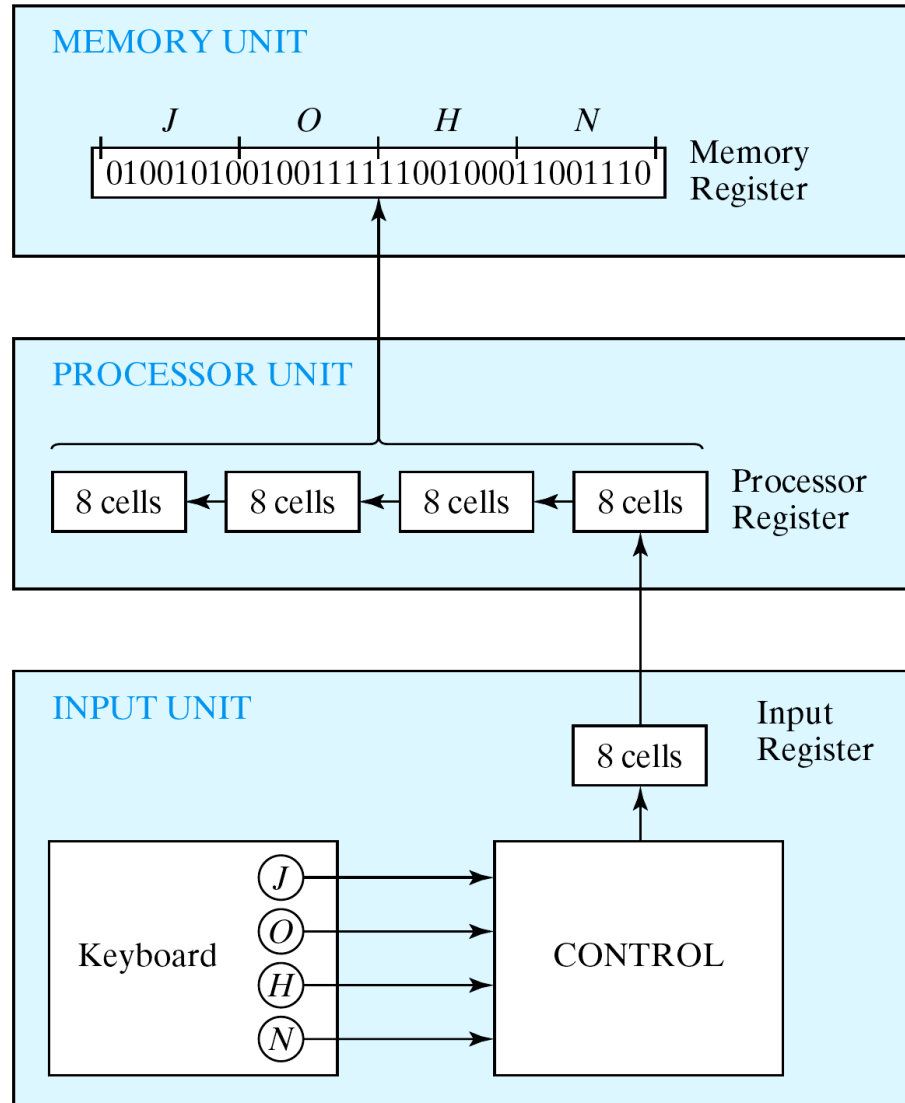


Figure 1.1 Transfer of information among register

Transfer of information

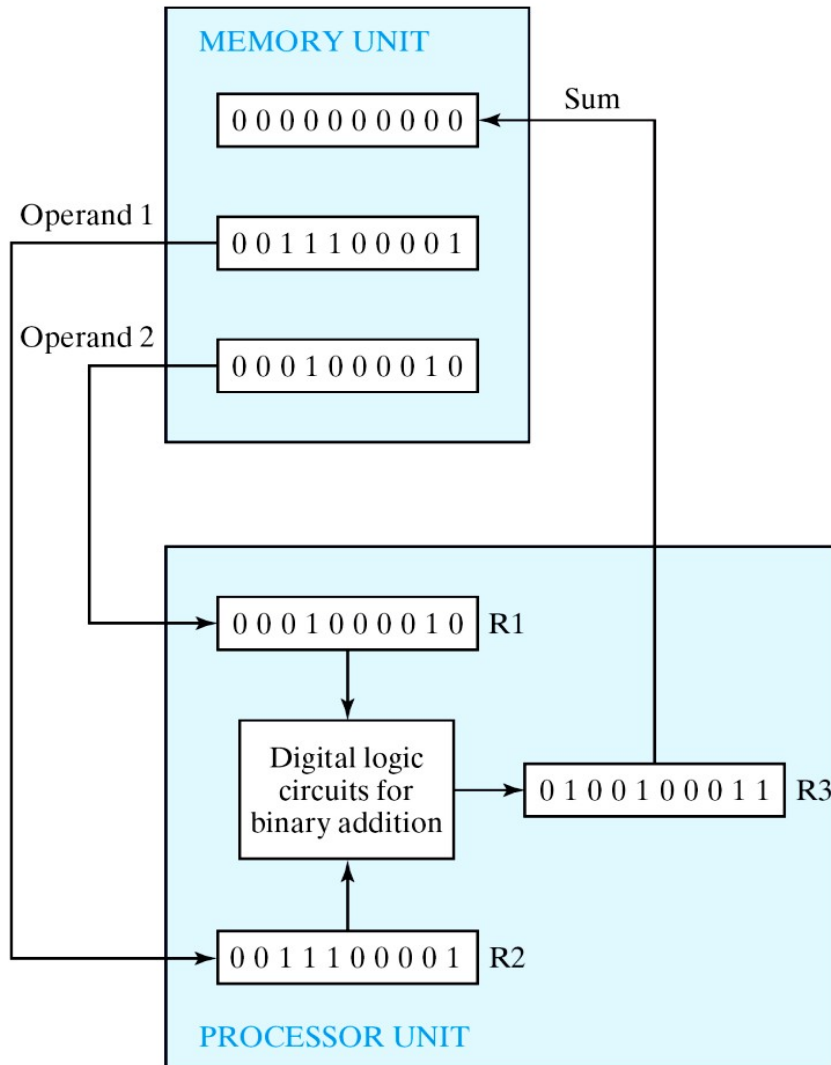

- The other major component of a digital system
 - Circuit elements to manipulate individual bits of information
 - Load-store machine

```
LD    R1;  
LD    R2;  
ADD   R3, R2, R1;  
SD    R3;
```

Figure 1.2 Example of binary information processing

Binary Logic

- Definition of Binary Logic

- Binary logic consists of binary variables and a set of logical operations.
- The variables are designated by letters of the alphabet, such as A, B, C, x, y, z , etc, with each variable having two and only two distinct possible values: 1 and 0,
- Three basic logical operations: AND, OR, and NOT.

1. AND: This operation is represented by a dot or by the absence of an operator. For example, $x \cdot y = z$ or $xy = z$ is read “ x AND y is equal to z ,” The logical operation AND is interpreted to mean that $z = 1$ if only $x = 1$ and $y = 1$; otherwise $z = 0$. (Remember that x, y , and z are binary variables and can be equal either to 1 or 0, and nothing else.)
2. OR: This operation is represented by a plus sign. For example, $x + y = z$ is read “ x OR y is equal to z ,” meaning that $z = 1$ if $x = 1$ or $y = 1$ or if both $x = 1$ and $y = 1$. If both $x = 0$ and $y = 0$, then $z = 0$.
3. NOT: This operation is represented by a prime (sometimes by an overbar). For example, $x' = z$ (or $\bar{x} = z$) is read “not x is equal to z ,” meaning that z is what x is not. In other words, if $x = 1$, then $z = 0$, but if $x = 0$, then $z = 1$, The NOT operation is also referred to as the complement operation, since it changes a 1 to 0 and a 0 to 1.

Binary Logic gates

- Truth Tables, Boolean Expressions, and Logic Gates

AND

x	y	z
0	0	0
0	1	0
1	0	0
1	1	1

$$z = x \cdot y = x y$$

OR


x	y	z
0	0	0
0	1	1
1	0	1
1	1	1








$$z = x + y$$

NOT

x	z
0	1
1	0

$$z = \overline{x} = x'$$



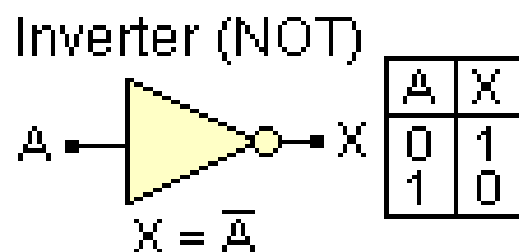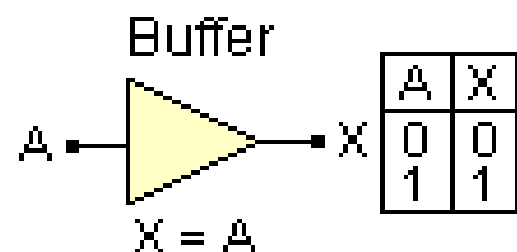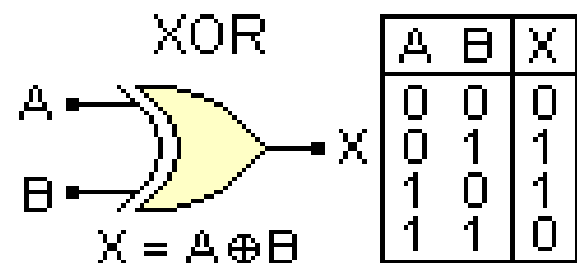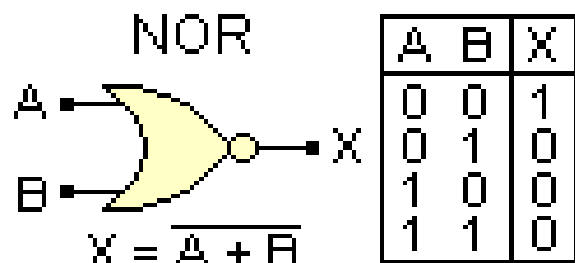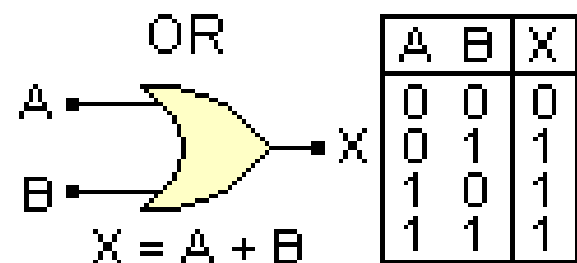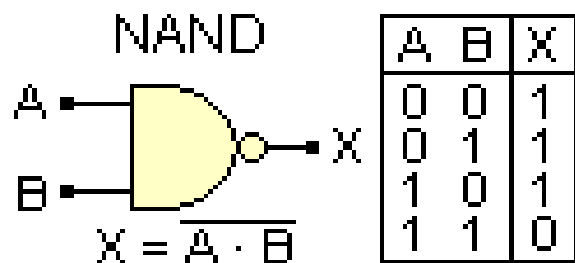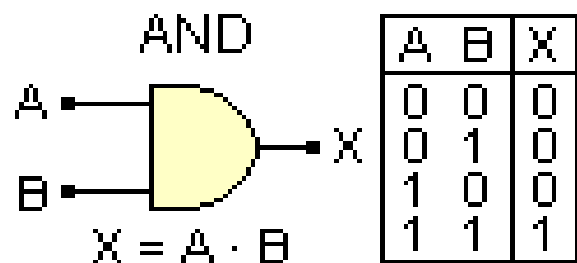


Logic Function	Boolean Notation
AND	$A \cdot B$
OR	$A + B$
NOT	\overline{A}
NAND	$\overline{A \cdot B}$
NOR	$\overline{A + B}$
EX-OR	$(A \cdot \overline{B}) + (\overline{A} \cdot B) \text{ or } A \oplus B$
EX-NOR	$(\overline{A} \cdot \overline{B}) + \overline{A \oplus B}$


Universal Gate

- **NAND and NOR** Gates are called **Universal Gates** because AND, OR and NOT gates can be implemented & created by using these gates.

NAND Gate Implementations

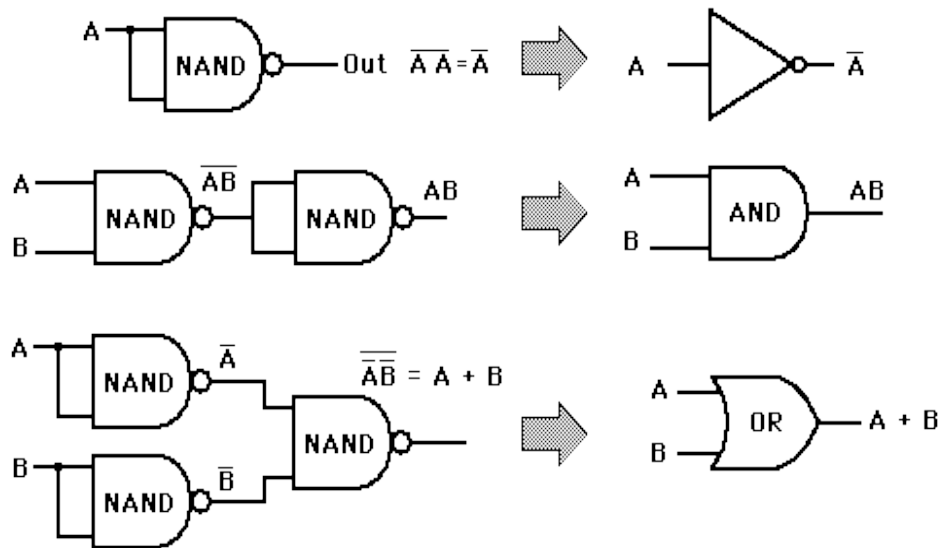

NOR Gate Implementations

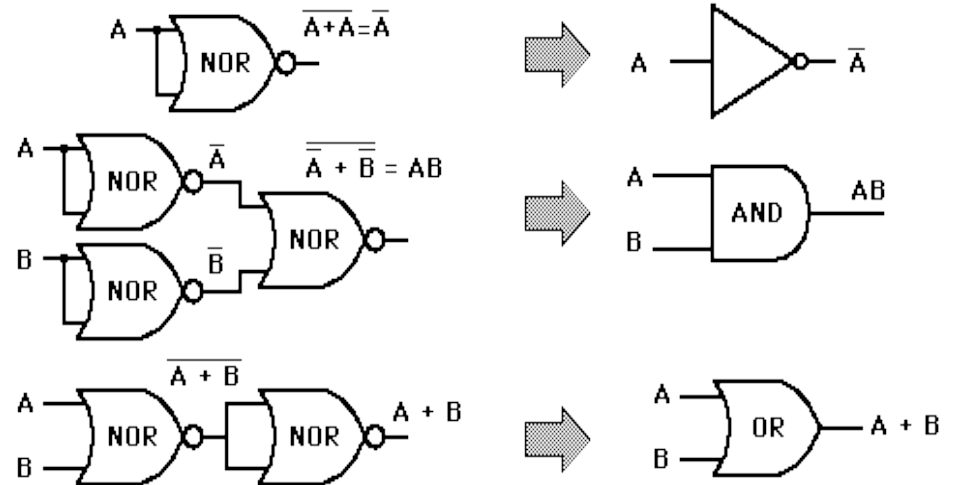

Binary Logic

- Logic gates
 - Example of binary signals



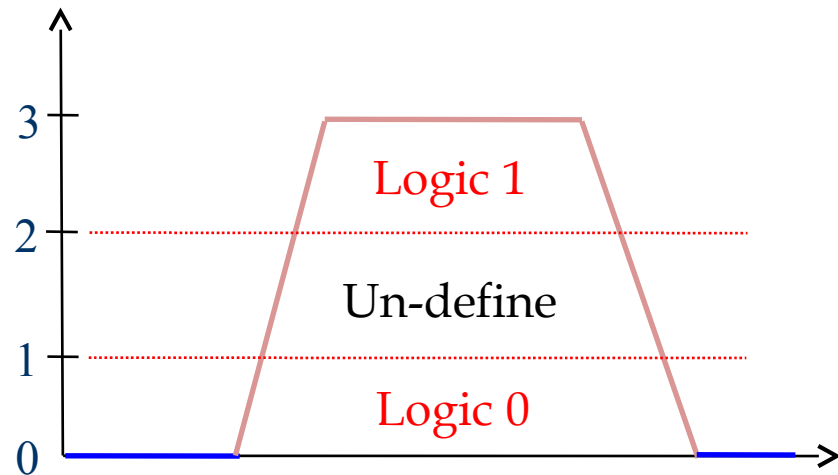



Figure 1.3 Example of binary signals

Binary Logic


- Logic gates

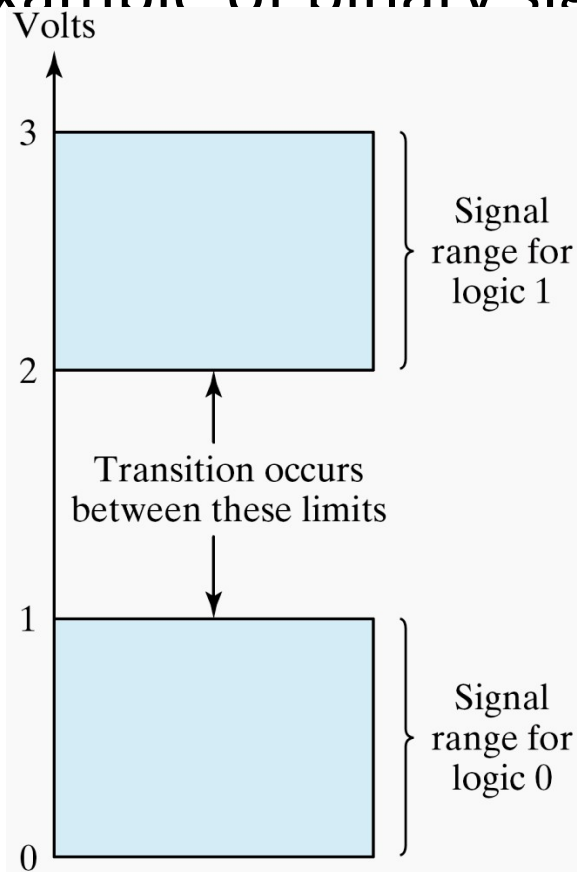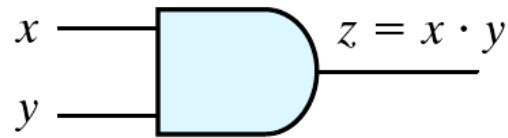

(a) Two-input AND gate

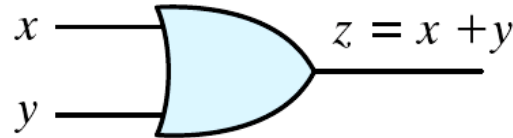

(b) Two-input OR gate

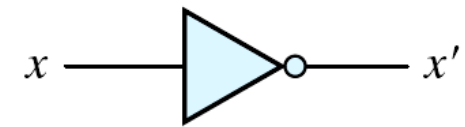

(c) NOT gate or inverter

Fig. 1.4 Symbols for digital logic circuits

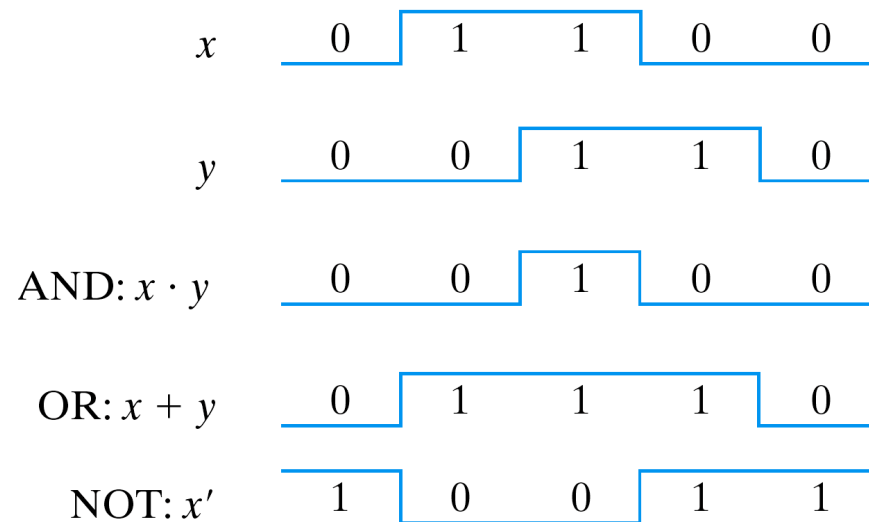


Fig. 1.5 Input-Output signals for gates

Binary Logic

- Logic gates
 - Graphic Symbols and Input-Output Signals for Logic

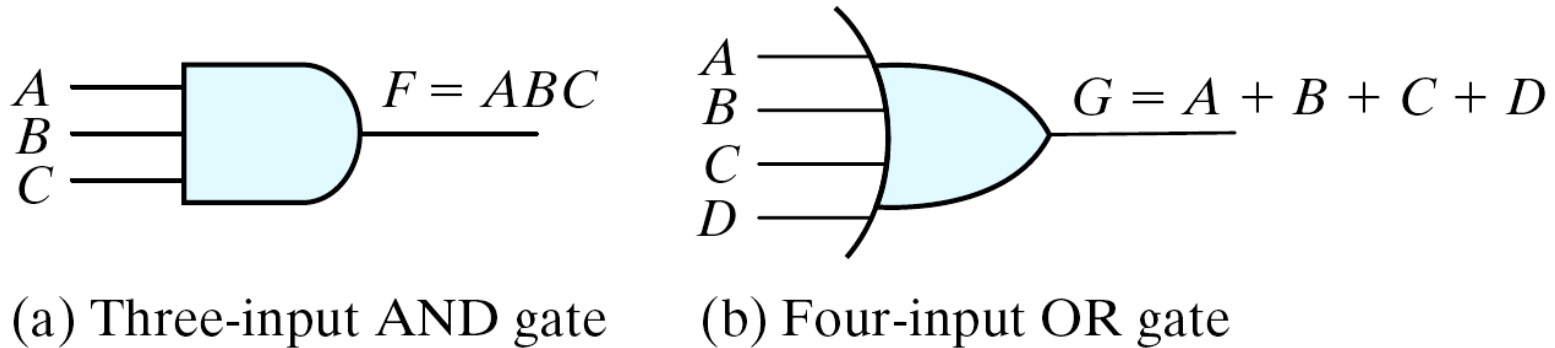


Fig. 1.6 Gates with multiple inputs

Boolean Algebra

Boolean Algebra : George Boole(English mathematician), 1854

- Invented by George Boole in 1854
- An algebraic structure defined by a set $B = \{0, 1\}$, together with two binary operators (+ and \cdot) and a unary operator ()

“An Investigation of the Laws of Thought, on Which Are Founded the Mathematical Theories of Logic and Probabilities”

Boolean Algebra

$\{(1,0), \text{Var}, (\text{NOT}, \text{AND}, \text{OR}), \text{Thms}\}$

- Mathematical tool to expression and analyze **digital (logic) circuits**
- Claude Shannon, the first to apply Boole’s work, 1938
 - “A Symbolic Analysis of Relay and Switching Circuits” at MIT
- This chapter covers Boolean algebra, Boolean expression and its evaluation and simplification, and VHDL program

Basic Functions and Basic Functions

Boolean functions : NOT, AND, OR,

exclusive OR(XOR) : odd function

exclusive NOR(XNOR) : even function(equivalence)

Boolean functions for (a) AND, (b) OR, (c) XOR, and (d) NOT

x	y	$x \wedge y$
0	0	0
0	1	0
1	0	0
1	1	1

(a)

x	y	$x \vee y$
0	0	0
0	1	1
1	0	1
1	1	1

(b)

x	y	$x \oplus y$
0	0	0
0	1	1
1	0	1
1	1	0

(c)

x	x'
0	1
1	0

(d)

Basic functions

- AND $Z = X \cdot Y$ or $Z = XY$

$Z=1$ if and only if $X=1$ and $Y=1$, otherwise $Z=0$

- OR $Z = X + Y$

$Z=1$ if $X=1$ or if $Y=1$, or both $X=1$ and $Y=1$. $Z=0$ if and only if $X=0$ and $Y=0$

- NOT $Z = X'$ or

$Z=1$ if $X=0$, $Z=0$ if $X=1$

Boolean functions for (a) NAND, (b) NOR, and (c) XNOR

x	y	NAND
0	0	1
0	1	1
1	0	1
1	1	0

(a)

x	y	NOR
0	0	1
0	1	0
1	0	0
1	1	0

(b)

x	y	XNOR
0	0	1
0	1	0
1	0	0
1	1	1

(c)


All possible binary boolean functions

x	y	0	\wedge	xy'	x	$x'y$	y	\oplus	\vee	NOR	XNOR	y'	$x + y'$	x'	$x' + y$	NAND	1
0	0	0	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1
0	1	0	0	0	0	1	1	1	1	0	0	0	0	1	1	1	1
1	0	0	0	1	1	0	0	1	1	0	0	1	1	0	0	1	1
1	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1	0	1

Boolean Operations and Expressions

- Boolean Addition

- Logical OR operation




Ex 4-1) Determine the values of A, B, C, and D that make the sum term $A+B'+C+D'$

Sol) all literals must be '0' for the sum term to be '0'

$$A+B'+C+D'=0+1'+0+1'=0 \rightarrow A=0, B=1, C=0, \text{ and } D=1$$

- Boolean Multiplication

- Logical AND operation



Ex 4-2) Determine the values of A, B, C, and D that make the product term $AB'CD'$ equal to 1

1

Sol) all literals must be '1' for the product term to be '1'

$$AB'CD'=10'10'=1 \rightarrow A=1, B=0, C=1, \text{ and } D=0$$

Basic Identities of Boolean Algebra

Basic Identities of Boolean Algebra

1. $X + 0 = X$

3. $X + 1 = 1$

5. $X + X = X$

7. $X + \bar{X} = 1$

9. $\overline{\bar{X}} = X$

2. $X \cdot 1 = X$

4. $X \cdot 0 = 0$

6. $X \cdot X = X$

8. $X \cdot \bar{X} = 0$

The relationship between a single variable X , its complement X' , and the binary constants 0 and 1

10. $X + Y = Y + X$

12. $X + (Y + Z) = (X + Y) + Z$

14. $X(Y + Z) = XY + XZ$

16. $\overline{X + Y} = \bar{X} \cdot \bar{Y}$

11. $XY = YX$

13. $X(YZ) = (XY)Z$

15. $X + YZ = (X + Y)(X + Z)$

17. $\overline{X \cdot Y} = \bar{X} + \bar{Y}$

Commutative

Associative


Distributive

DeMorgan's

Laws of Boolean Algebra

- Commutative Law: the order of literals does not matter

$$A + B = B + A$$

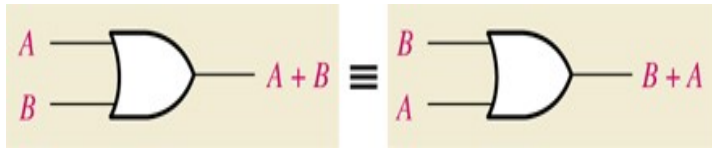


$$A B = B A$$




- Associative Law: the grouping of literals does not matter

$$A + (B + C) = (A + B) + C (=A+B+C)$$

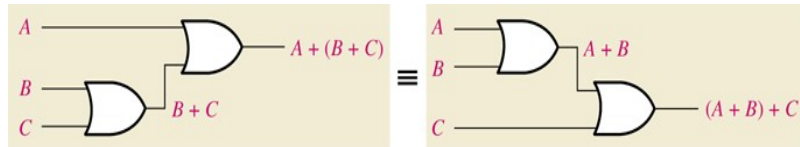


$$A(BC) = (AB)C (=ABC)$$

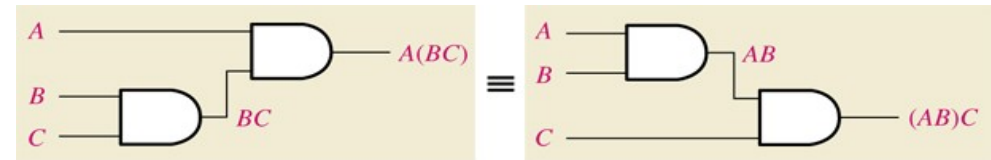


- Distributive Law : $A(B + C) = AB + AC$

$$(A+B)(C+D) = AC + AD + BC + BD$$

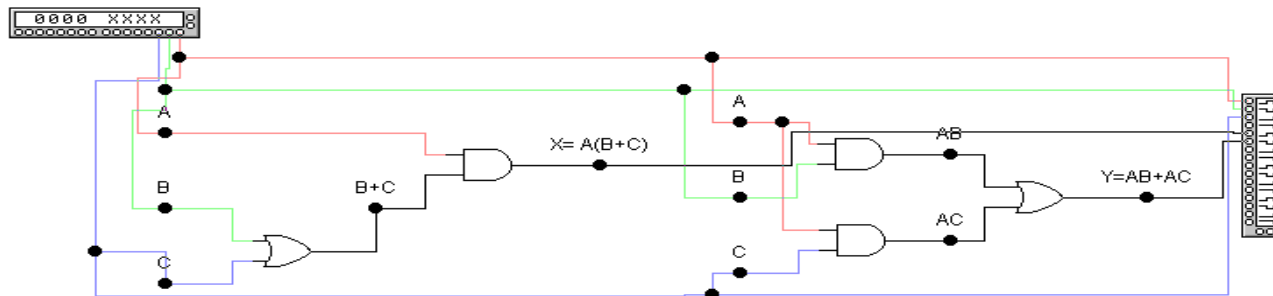

Rules of Boolean Algebra

- ✓ $A+0=A$ In math if you add 0 you have changed nothing in Boolean Algebra ORing with 0 changes nothing
- ✓ $A \cdot 0=0$ In math if 0 is multiplied with you get 0. If you AND anything with 0 you get 0
- ✓ $A \cdot 1 = A$ ANDing anything with 1 will yield the anything
- ✓ $A+A = A$ ORing with itself will give the same result
- ✓ $A+A'=1$ Either A or A' must be 1 so $A + A' = 1$
- ✓ $A \cdot A = A$ ANDing with itself will give the same result
- ✓ $A \cdot A' = 0$ In digital Logic $1' = 0$ and $0' = 1$, so $AA' = 0$ since one of the inputs must be 0.
- ✓ $A = (A')'$ If you not something twice you are back to the beginning

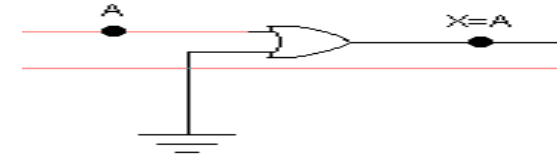

✓ $A + A'B = A + B$

If A is 1 the output is 1 If A is 0 the output is B

✓ $A + AB = A$


✓ $(A + B)(A + C) = A + BC$

- **DeMorgan's Theorem**


- $F'(A, A', \cdot, +, 1, 0) = F(A', A, +, \cdot, 0, 1)$

- $(A \bullet B)' = A' + B'$ and $(A + B)' = A' \bullet B'$

- DeMorgan's theorem will help to simplify digital circuits using NORs and NANDs his theorem states

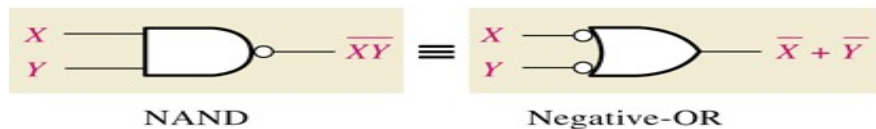


Inputs		Output	
X	Y	\overline{XY}	$\overline{X} + \overline{Y}$
0	0	1	1
0	1	1	1
1	0	1	1
1	1	0	0

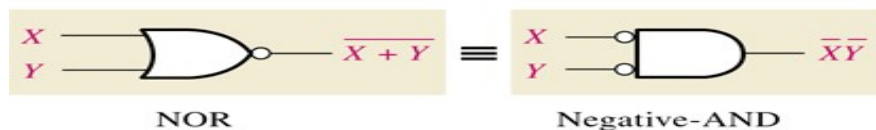

Inputs		Output	
X	Y	$\overline{X} + \overline{Y}$	$\overline{X}\overline{Y}$
0	0	1	1
0	1	0	0
1	0	0	0
1	1	0	0

Boolean Analysis of Logic Circuits

- Constructing a Truth Table for a Logic Circuit

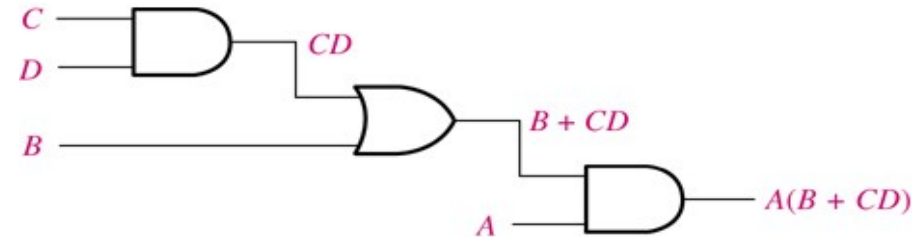

- Convert the expression into the min-terms containing all the input literals
- Get the numbers from the min-terms
- Putting '1's in the rows corresponding to the min-terms and '0's in the remains

$$\begin{aligned} \text{Ex) } A(B+CD) &= AB(C+C')(D+D') + A(B+B')CD = ABC(D+D') + ABC'(D+D') + ABCD + AB'CD \\ &= ABCD + ABCD' + ABC'D + ABC'D' + ABCD + AB'CD = ABCD + ABCD' + ABC'D + ABC'D' \\ &\quad + AB'CD = m_{11} + m_{12} + m_{13} + m_{14} + m_{15} = \Sigma(11, 12, 13, 14, 15) \end{aligned}$$

$$\underline{A(B+CD) = m_{11} + m_{12} + m_{13} + m_{14} + m_{15} = \Sigma(11, 12, 13, 14, 15)}$$

Input				Output
A	B	C	D	$A(B+CD)$
0	0	0	0	0
0	0	0	1	0
0	0	1	0	0
0	0	1	1	0
0	1	0	0	0
0	1	0	1	0
0	1	1	0	0
0	1	1	1	0
1	0	0	0	0
1	0	0	1	0
1	0	1	0	0
1	0	1	1	1
1	1	0	0	1
1	1	0	1	1
1	1	1	0	1
1	1	1	1	1

Standard Forms of Boolean Expressions

- ❑ The Sum-of-Products(SOP) Form Ex) $AB+ABC, ABC+CDE+B'CD'$
 - ❑ The Product-of-Sums(POS) Form Ex) $(A+B)(A+B+C), (A+B+C)(C+D+E)(B'+C+D')$
 - ❑ Principle of Duality : $SOP \Leftrightarrow POS$
 - ❑ Domain of a Boolean Expression : The set of variables contained in the expression
Ex) $A'B+AB'C$: the domain is $\{A, B, C\}$
- ✓ **Standard SOP Form (Canonical SOP Form)**
- For all the missing variables, apply $(x+x')=1$ to the AND terms of the expression
 - List all the min-terms in forms of the complete set of variables in ascending order

Ex : Convert the following expression into standard SOP form: $AB'C+A'B'+ABC'D$

Sol) domain= $\{A,B,C,D\}$, $AB'C(D'+D)+A'B'(C'+C)(D'+D)+ABC'D$
 $=AB'CD'+AB'CD+A'B'C'D'+A'B'C'D+A'B'CD'+A'B'CD+ABC'D$
 $=1010+1011+0000+0001+0010+0011+1101 = 0+1+2+3+10+11+13 =$
 $\Sigma(0,1,2,3,10,11,13)$

Standard POS Form (Canonical POS Form)

- For all the missing variables, apply $(x'x)=0$ to the OR terms of the expression
- List all the max-terms in forms of the complete set of variables in ascending order

Ex : Convert the following expression into standard POS form: $(A+B'+C)(B'+C+D')(A+B'+C'+D)$

$$\begin{aligned}\text{Sol) domain} &= \{A, B, C, D\}, & (A+B'+C)(B'+C+D')(A+B'+C'+D) \\ &= (A+B'+C+D'D)(A'A+B'+C+D')(A+B'+C'+D) = (A+B'+C+D') \\ & (A+B'+C+D)(A'+B'+C+D')(A+B'+C+D')(A+B'+C'+D) = (0100)(0101) \\ & (0110)(1101) = \Pi(4,5,6,13)\end{aligned}$$

Converting Standard SOP to Standard POS

- Step 1. Evaluate each product term in the SOP expression. Determine the binary numbers that represent the product terms
- Step 2. Determine all of the binary numbers not included in the evaluation in Step 1
- Step 3. Write in equivalent sum term for each binary number Step 2 and expression in POS form

Ex : Convert the following SOP to POS

Sol) $SOP = A'B'C' + A'BC' + A'BC + AB'C + ABC = 0 + 2 + 3 + 5 + 7 = \Sigma(0, 2, 3, 5, 7)$

$POS = (1)(4)(6) = \Pi(1, 4, 6) (= (A+B+C')(A'+B+C)(A'+B'+C))$



SOP and POS Observations

- Canonical Forms (Sum-of-minterms, Product-of-Maxterms), or other standard forms (SOP, POS) differ in complexity
- Boolean algebra can be used to manipulate equations into simpler forms
- Simpler equations lead to simpler implementations

Summary of Minterms and Maxterms

- There are 2^n minterms and maxterms for Boolean functions with n variables.
- Minterms and maxterms are indexed from 0 to $2^n - 1$
- Any Boolean function can be expressed as a logical sum of minterms and as a logical product of maxterms
- The complement of a function contains those minterms not included in the original function
- The complement of a sum-of-minterms is a product-of-maxterms with the same indices

Dual of a Boolean Expression

- **To changing 0 to 1 and + operator to \cdot – vice versa for a given boolean function**

❑ **Example:** $F = (A + C) \cdot B + 0$

$$\text{dual } F = (A \cdot C + B) \cdot 1 = A \cdot C + B$$


❑ **Example:** $G = X \cdot Y + (W + Z)$

$$\text{dual } G =$$

- ✓ **Unless it happens to be self-dual, the dual of an expression does not equal the expression itself**
- ✓ **Are any of these functions self-dual?** $(A+B)(A+C)(B+C)=(A+BC)(B+C)=AB+AC+BC$

Karnaugh Map


- Simplification methods
 - Boolean algebra(algebraic method)
 - Karnaugh map(map method))**
 - Quine-McCluskey(tabular method)

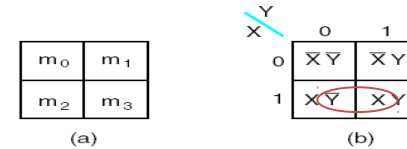


Two-Variable Map

$$XY + XY' = X(Y + Y') = X$$

Three- and Four-input Karnaugh maps

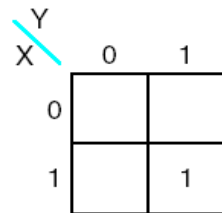


(a) XY

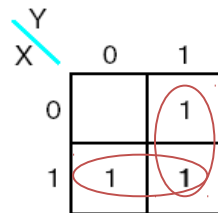


(b) X + Y

Representation of Functions in the Map

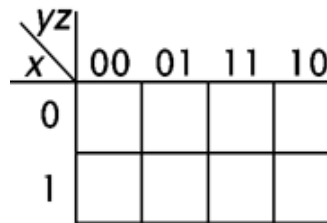

(a)

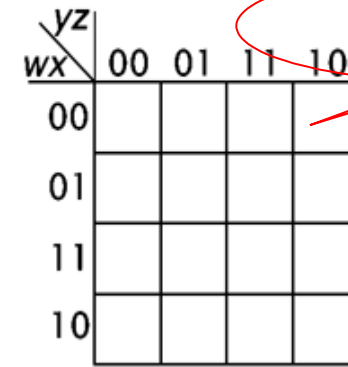

(b)

Gray code

m ₀	m ₁	m ₃	m ₂
m ₄	m ₅	m ₇	m ₆

(a)

		Y			
		00	01	11	10
X	0	$\bar{X}\bar{Y}\bar{Z}$	$\bar{X}\bar{Y}Z$	$\bar{X}YZ$	$\bar{X}Y\bar{Z}$
X	1	$X\bar{Y}\bar{Z}$	$X\bar{Y}Z$	XYZ	$XY\bar{Z}$

(b)

Three-Variable Map

		C	
		0	1
AB	00		
	01		
	11		
	10		

(a)


		C	
		0	1
AB	00	$\bar{A}\bar{B}\bar{C}$	$\bar{A}\bar{B}C$
	01	$\bar{A}B\bar{C}$	$\bar{A}BC$
	11	$AB\bar{C}$	ABC
	10	$A\bar{B}\bar{C}$	$A\bar{B}C$

(b)


Karnaugh Map (K- Map) Steps

1. Sketch a Karnaugh map grid for the given problem.in power of 2^N Squares
2. Fill in the 1's and 0's from the truth table of sop or pos Boolean function
3. Circle groups of 1's.
 - ◆ Circle the largest groups of 2, 4, 8, etc. first.
 - ◆ Minimize the number of circles but make sure that every 1 is in a circle.
4. Write an equation using these circles.

Example) $F(X,Y,Z)=\Sigma m(2,3,4,5) = X'Y + XY'$

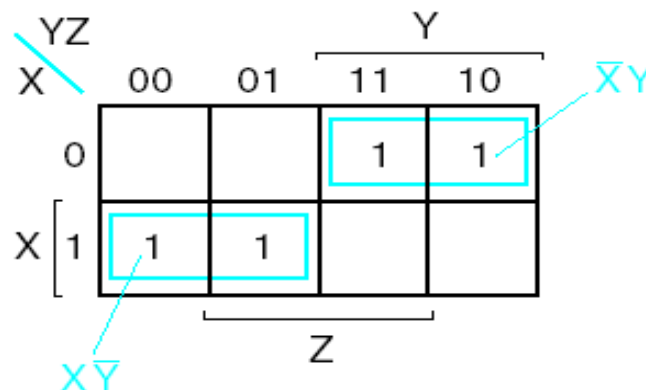

Example) $F(X,Y,Z)=\Sigma m(0,2,4,6) = X'Z' + XZ' = Z'(X' + X) = Z'$

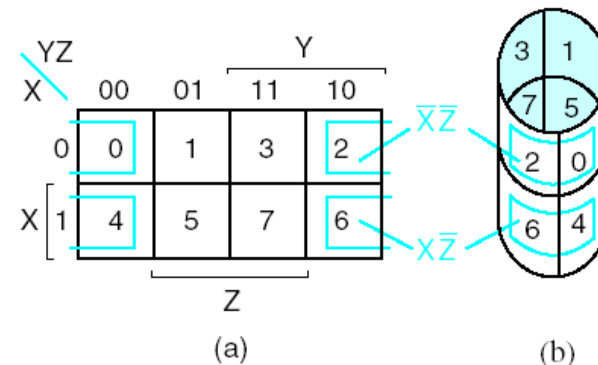

Three-Variable Map: Flat and on a Cylinder to Show Adjacent Squares


Four-Variable K-Map : 16 minterms : $m_0 \sim m_{15}$

Rectangle group

- 2-squares(minterms) : 3-literals product term
- 4-squares : 2-literals product term
- 8-squares : 1-literals product term
- 16-squares : logic 1

m_0	m_1	m_3	m_2
m_4	m_5	m_7	m_6
m_{12}	m_{13}	m_{15}	m_{14}
m_8	m_9	m_{11}	m_{10}

(a)

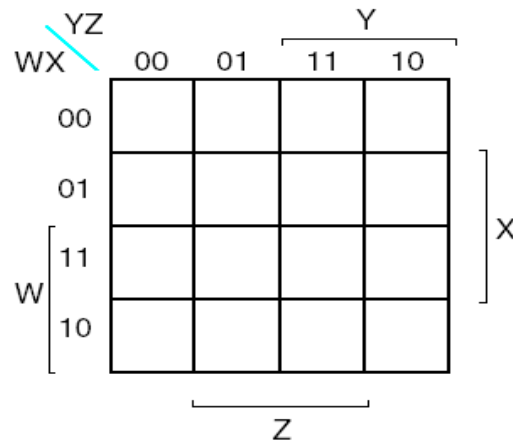

(b)

	CD	00	01	11	10
AB	00	$\bar{A}\bar{B}\bar{C}\bar{D}$	$\bar{A}\bar{B}\bar{C}D$	$\bar{A}\bar{B}C\bar{D}$	$\bar{A}\bar{B}CD$
	01	$\bar{A}\bar{B}\bar{C}\bar{D}$	$\bar{A}\bar{B}\bar{C}D$	$\bar{A}\bar{B}C\bar{D}$	$\bar{A}\bar{B}CD$
	11	$A\bar{B}\bar{C}\bar{D}$	$A\bar{B}\bar{C}D$	$ABC\bar{D}$	$ABCD$
	10	$\bar{A}\bar{B}\bar{C}\bar{D}$	$\bar{A}\bar{B}\bar{C}D$	$\bar{A}\bar{B}C\bar{D}$	$\bar{A}\bar{B}CD$

Fig. 2-17 Four-Variable Map

$$F(W, X, Y, Z) = \Sigma m(0, 2, 7, 8, 9, 10, 11) = WX' + X'Z' + \textcolor{red}{W'XYZ}$$

yz \ wx	00	01	11	10
00	1	0	0	1
01	0	0	1	0
11	0	0	0	0
10	1	1	1	1

(a)

yz \ wx	00	01	11	10
00	1	0	0	1
01	0	0	1	0
11	0	0	0	0
10	1	1	1	1

(b)

Ex 4-28) Minimize the following expression

$$AB'C + A'BC + A'B'C + A'B'C' + AB'C'$$

Sol) $B' + A'C$

AB \ C	0	1
00	1	1
01		1
11		
10	1	1

$\bar{A}C$ (points to the 1s in the C=1 column where A=0)
 \bar{B} (points to the 1s in the AB=00 and AB=10 rows)


Ex Minimize the following expression

$$B'C'D' + A'BC'D' + ABC'D' + A'B'CD + AB'CD + A'B$$

Sol) $D' + B'C$


□ Don't Care Conditions

- it really does not matter since they will r or '1')
- The don't care terms can be used to advantage on the Karnaugh map

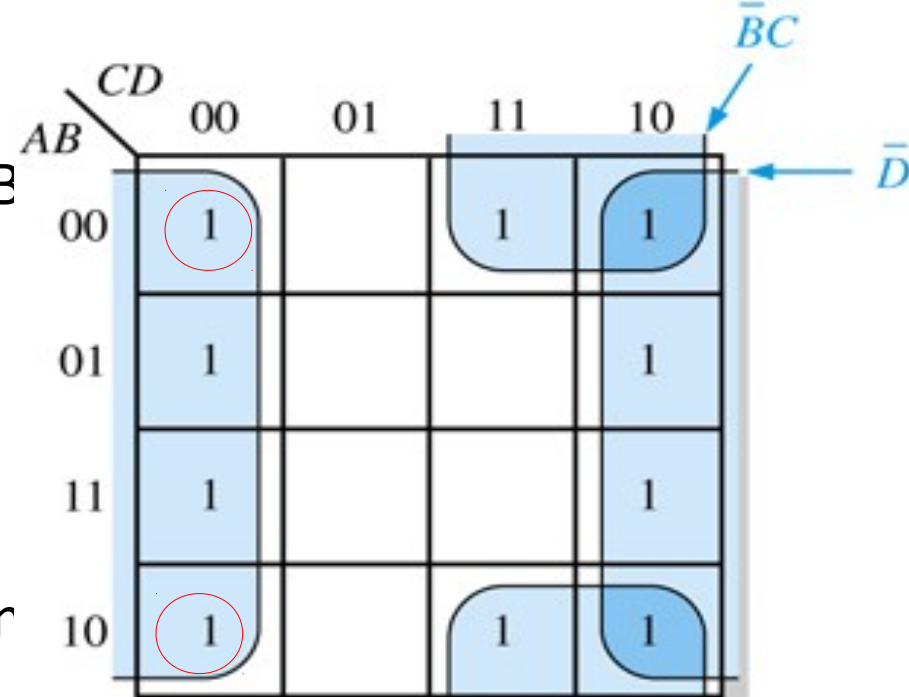

Inputs				Output
A	B	C	D	Y
0	0	0	0	0
0	0	0	1	0
0	0	1	0	0
0	0	1	1	0
0	1	0	0	0
0	1	0	1	0
0	1	1	0	0
0	1	1	1	1
1	0	0	0	1
1	0	0	1	1
1	0	1	0	X
1	0	1	1	X
1	1	0	0	X
1	1	0	1	X
1	1	1	0	X
1	1	1	1	X

Don't cares

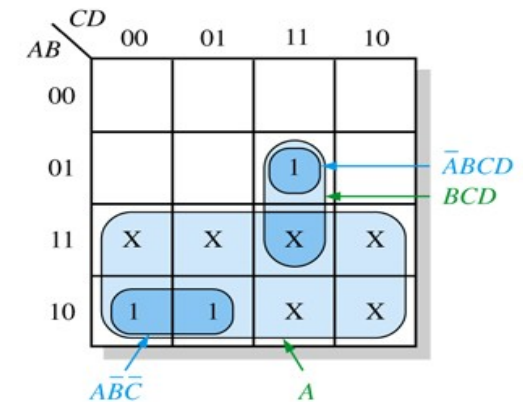

(a) Truth table

(b) Without "don't cares" $Y = A\bar{B}\bar{C} + \bar{A}BCD$
With "don't cares" $Y = A + BCD$

$$F = (C + D)(A' + B + C)(A + B + D)$$

(c) Minimum SOP: $AC + BC + BD + \overline{B}\overline{C}\overline{D}$

- Five Variable K-Map : $\{A,B,C,D,E\}$

BC \ DE	00	01	11	10
00	0 16	1 17	3 19	2 18
01	4 20	5 21	7 23	6 22
11	12 28	13 29	15 31	14 30
10	8 24	9 25	11 27	10 26

A=0
A=1

- Six Variable K-Map : $\{A,B,C,D,E,F\}$

AB

00
10 01
11

CD \ EF	00	01	11	10
00	0 32 48	1 33 49	3 35 51	2 34 50
01	4 36 52	5 37 53	7 39 55	6 38 54
11	12 44 60	13 45 61	15 47 62	14 46 63
10	8 40 56	9 41 57	11 43 59	10 42 58

Quine-McCluskey - Tabular Method

- **Step 1** – Arrange the given min terms in an **ascending order** and make the groups based on the number of ones present in their binary representations. - ‘**n+1**’ groups
- **Step 2** – Compare the min terms present in **successive groups**. If there is a change in only one-bit position, then take the pair of those two min terms. Place this symbol ‘_’ in the differed bit position and keep the remaining bits as it is.
- **Step 3** – Repeat step2 with newly formed terms till we get all **prime implicants**.
- **Step 4** – Formulate the **prime implicant table**. It consists of set of rows and columns. Place ‘1’ in the cells corresponding to the min terms that are covered in each prime implicant.
- **Step 5** – Find the essential prime implicates by observing each column. Those essential prime implicants will be part of the simplified Boolean function.
- **Step 6** – Reduce the prime implicant table by removing the row of each essential prime implicant and the columns corresponding to the min terms that are covered in that essential prime implicant. Repeat step 5 for Reduced prime implicant table. Stop this process when all min terms of given Boolean function are over.

1. Simplify the following expression to sum of product using Tabulation Method


$$F(a, b, c, d) = \sum (0, 1, 2, 3, 4, 6, 7, 11, 12, 15)$$

Solution:

a. Determination of Prime Implicants

Group 0	m0: 0000	✓	(0,1)	000-	✓	(0,1,2,3) 00--
			(0,2)	00-0	✓	(0,2,4,6) 0--0
			(0,4)	0-00	✓	(0,2,1,3) 00-- redundant
						(0,4,2,6) 0--0 redundant
Group 1	m1: 0001	✓	(1,3)	00-1	✓	(2,3,6,7) 0-1-
	m2: 0010	✓	(2,3)	001-	✓	(2,6,3,7) 0-1-
	m4: 0100	✓	(2,6)	0-10	✓	
			(4,6)	01-0	✓	
			(4,12)	-100		
Group 2	m3: 0011	✓	(3,7)	0-11	✓	(3,7,11,15) --11
	m6: 0110	✓	(3,11)	-011	✓	(3,11,7,15) --11 redundant
	m12: 1100	✓	(6,7)	011-	✓	
Group 3	m7: 0111	✓	(7,15)	-111	✓	
	m11: 1011	✓	(11,15)	1-11	✓	
Group 4	m15: 1111	✓				

b. Prime Implicant Chart:

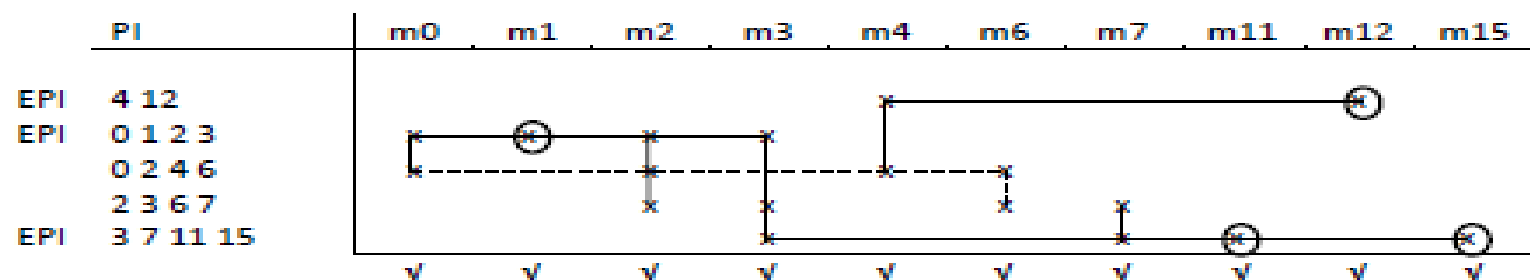

$$f(a, b, c, d) = bc'd' + a'b' + cd + a'd'$$

3. Simplify the following expression to product of sum using Tabulation Method

$$F(a, b, c, d) = \prod (1, 3, 5, 7, 13, 15)$$

Solution:

a. Determination of Prime Implicants

Group 0					
Group 1	M1: 0001	✓	(1,3)	00-1	✓ (1,3,5,7) 0--1
			(1,5)	0-01	
Group 2	M3: 0011	✓	(3,7)	0-11	✓ (5,7,13,15) -1-1
	M5: 0101	✓	(5,7)	01-1	✓ (5,13,7,15) -1-1 redundant
			(5,13)	-101	✓
Group 3	M7: 0111	✓	(7,15)	-111	✓
	M13: 1101	✓	(13,15)	11-1	✓
Group 4	M15: 1111	✓			

b. Prime Implicant Chart:

	PI	M1	M3	M5	M7	M13	M15
EPI	1 3 5 7	⊗	⊗	×	×		
EPI	5 7 13 15			×	×	⊗	⊗
		✓	✓	✓	✓	✓	✓

$$f(a, b, c, d) = (a + d')(b' + d')$$

Dr. Krishnanaik Vankdoth

B.E(ECE), M.Tech (ECE), Ph.D (ECE)

Professor

Vaagdevi College of Engineering

Electronics and Communications Engineering

Warangal – 506001

krishnanaik.ece@gmail.com

krishnanaik_ece@yahoo.com

Phone : +919441629162